

COBRA

MODEL: LR40

LAWN ROLLER OWNERS MANUAL



CAUTION

Before using this product, please read this manual carefully to understand the proper use of your garden roller. Please keep this manual for future reference.

Never attach a garden hose to the fill/drain hole when filling. Dangerous pressure could build up inside the roller.


Never use roller up and down hills, always work across hills and slopes.

Use caution when turning, slowing or stopping.

Always drain the roller for storage over winter as water may freeze inside the roller causing it to split.


Product colours may vary.

Parts and construction

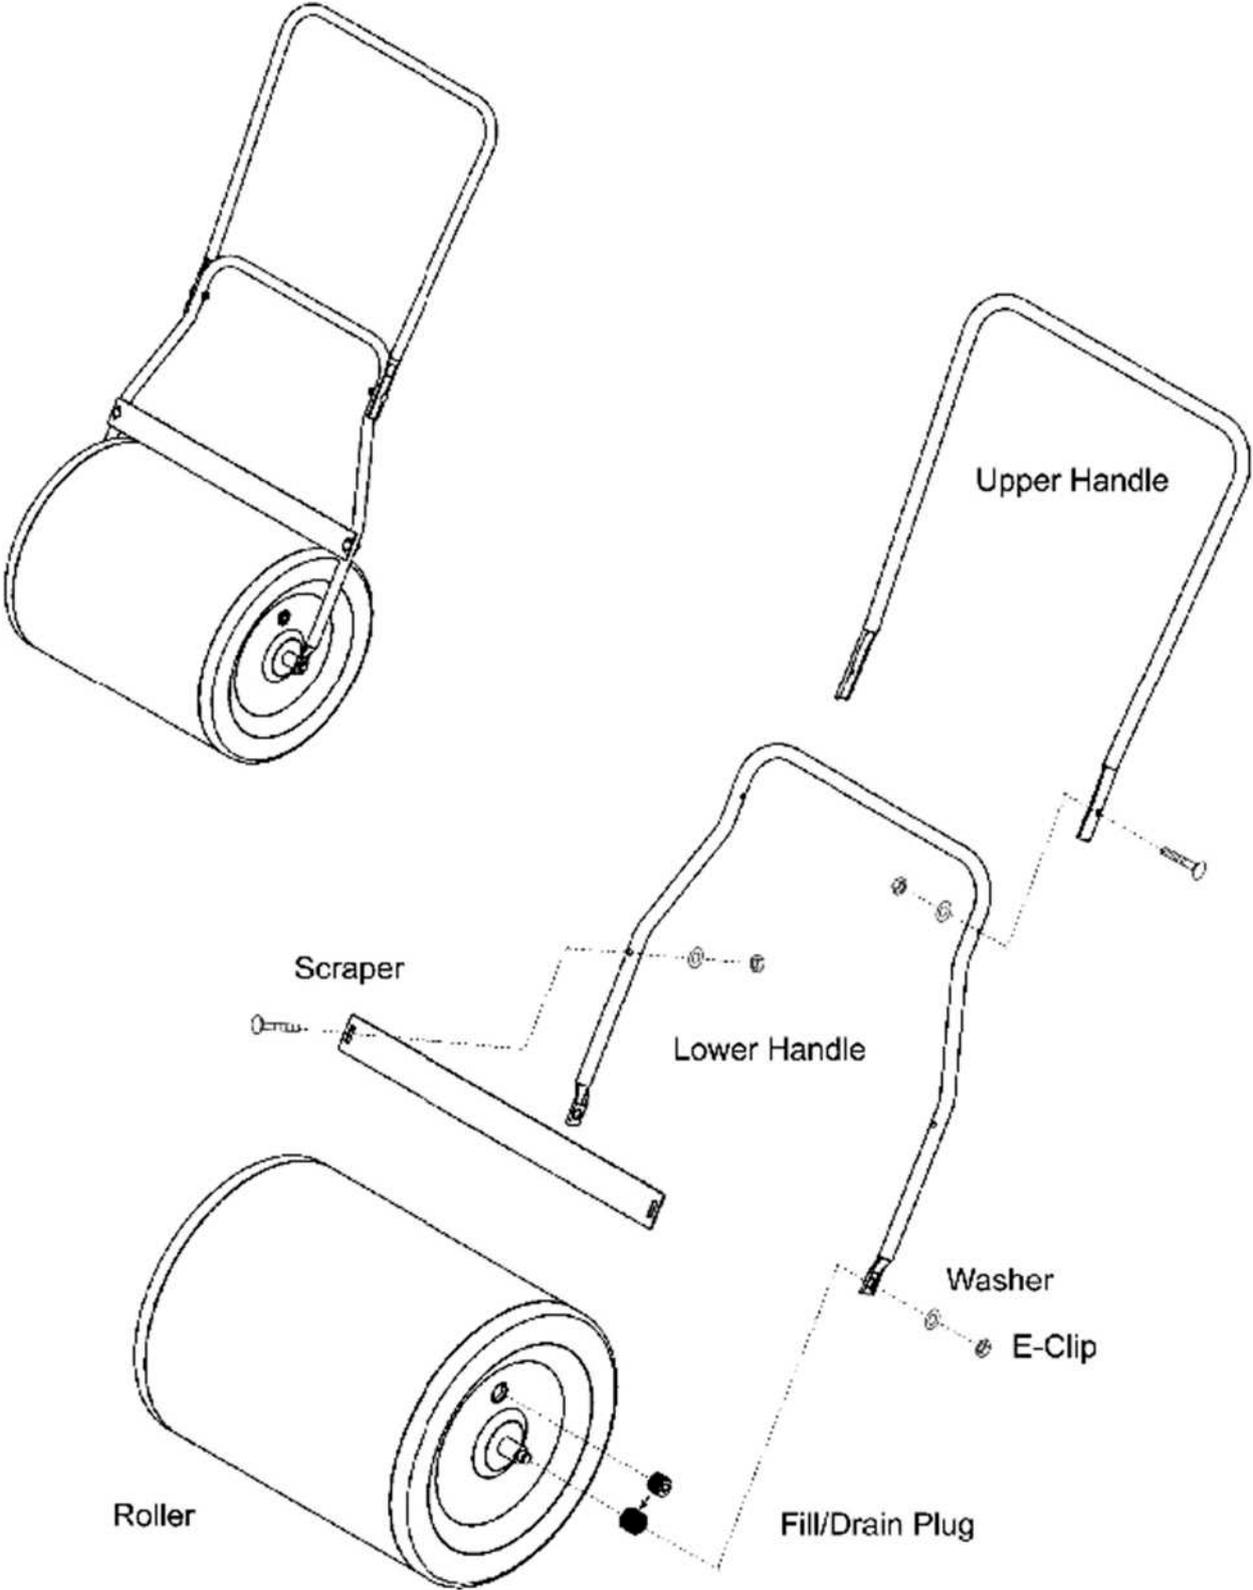

Assembly Instructions

Fit the Lower Handle to the Roller by placing one end of the Handle over the Roller Shaft.

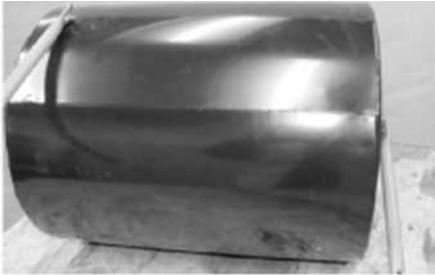

1



2



Then pull the other end of the Handle to place it over the other end of the Roller Shaft. You may need to bend the Handle slightly to stretch it over the Roller Shaft.

Secure with the E-Clips and Washers supplied. The E-Clips will need to be squeezed onto the Roller Shaft using pliers.

Fit the Scraper to the Lower Handle using the supplied Bolts, Washers and Nuts as shown ensure that the Scraper is just clear of the Roller before fully tightening the Nuts.

Fit the Upper Handle to the Lower Handle as shown using Bolts, Washers and Nuts. The Handle may be folded for storage by slackening the nuts.

The Roller may be filled with water or sand by removing the Fill/Drain plug, filling with the required amount and replacing the plug. If using water the Roller will need to be drained before winter storage, in order to avoid frost damage.

Always store covered or indoors to prevent corrosion or deterioration of the plastic.